






FUR-K208
1708


Installation diagram of shoe changing stool

			
Eccentric screw	Eccentric bolt	3.5CM self tapping screw	Metal pin
A*4	B*4	C*20	D*2

Eccentric installation principle

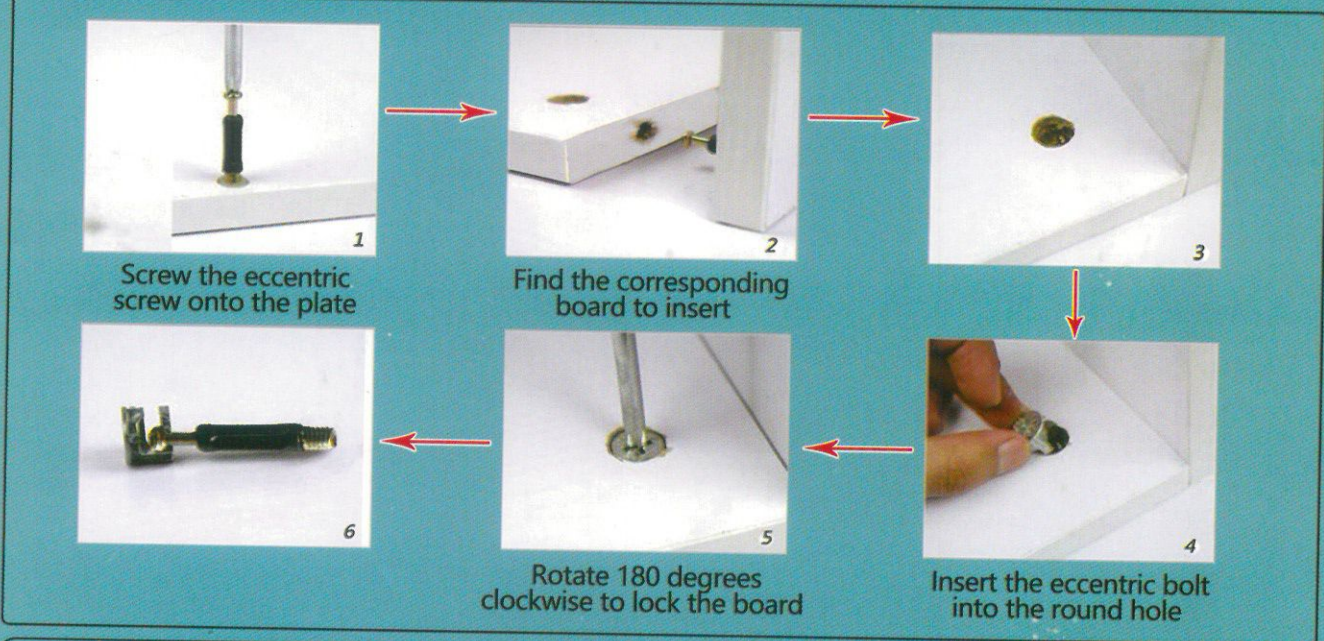

Installation of drawer section

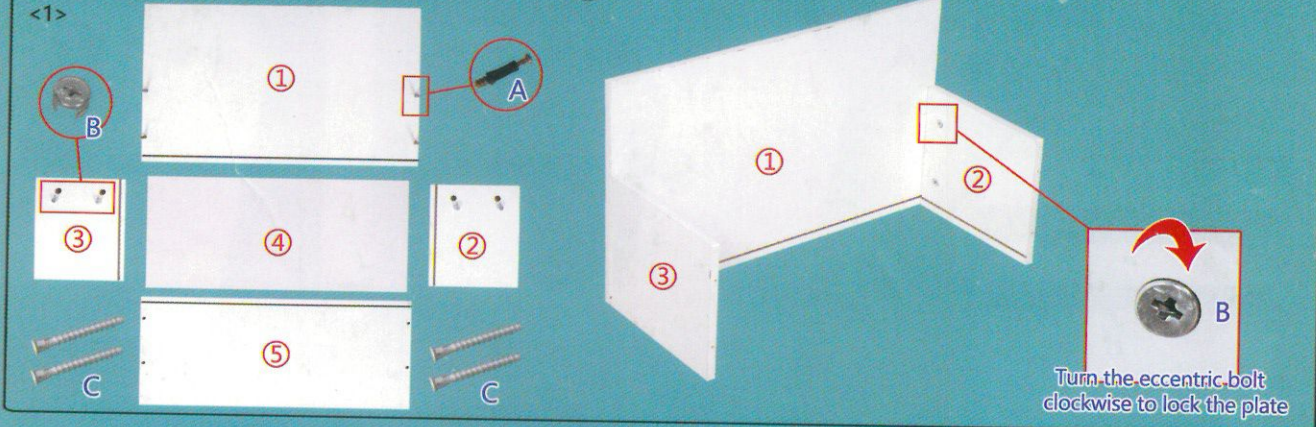

<3> Align the card slot and insert it



<4>


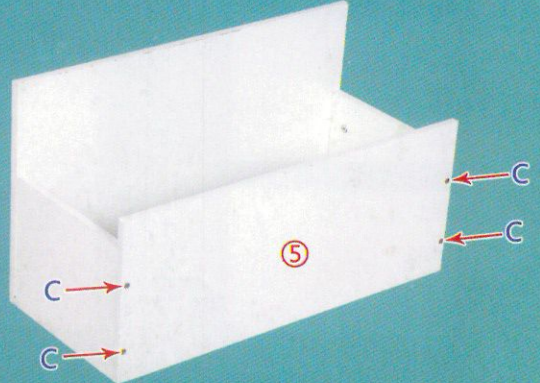



Plate part



<4>

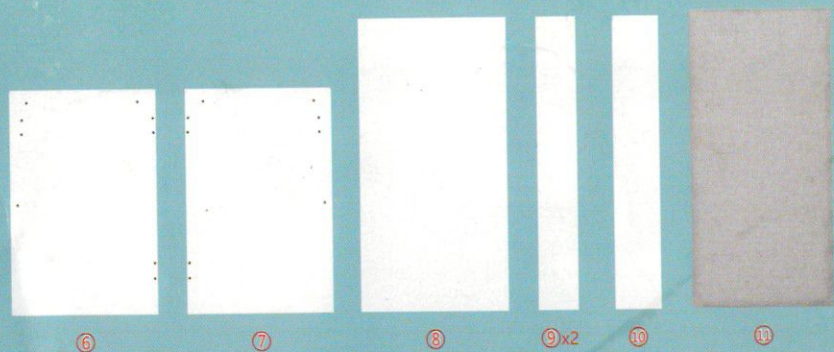


<5>

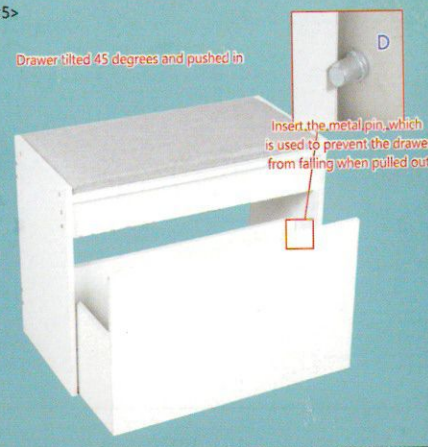

Step 1: Installation of overall parts


<1>

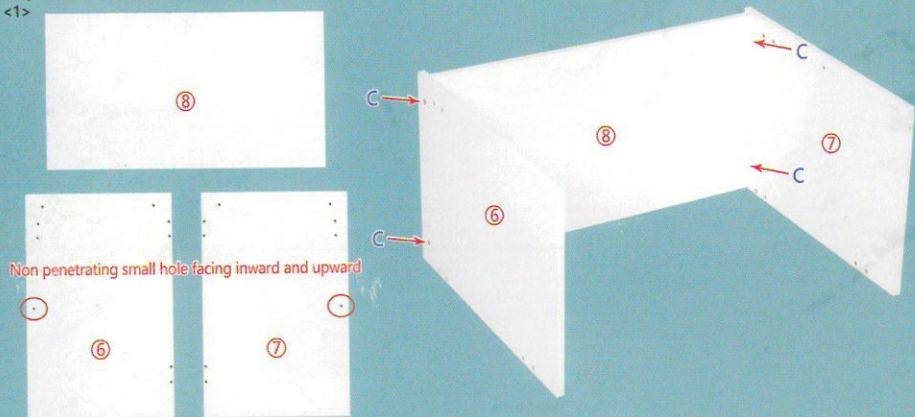

<6>



<2>

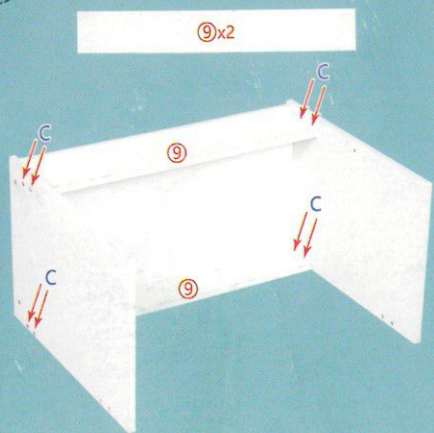

<3>

