




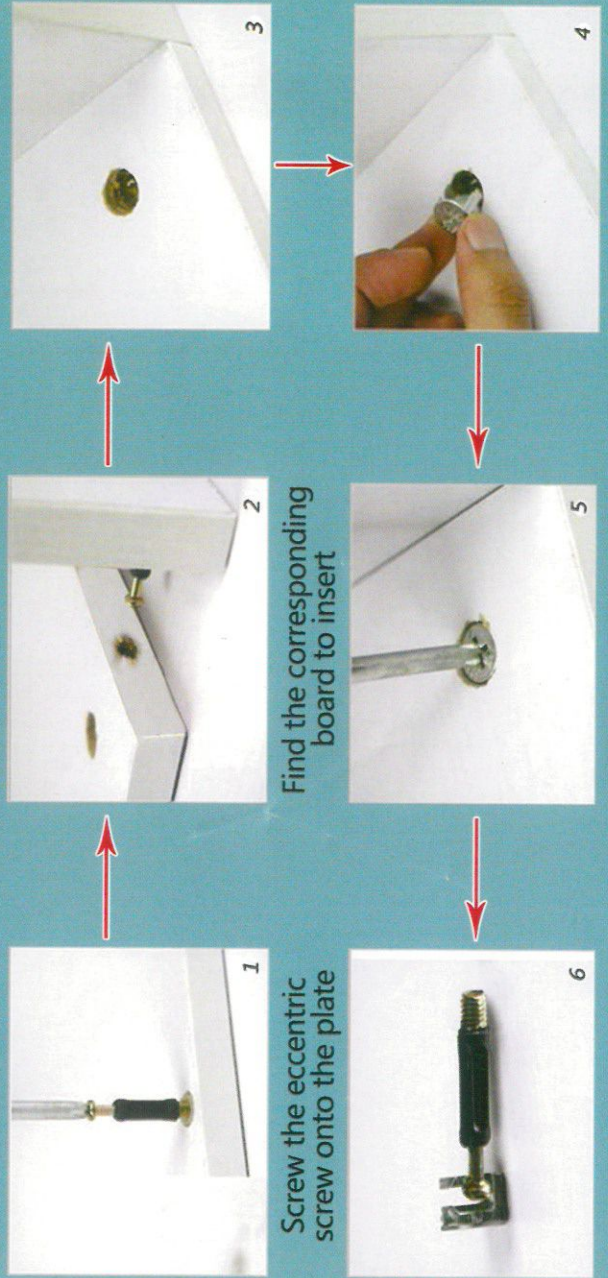


BE-03

Installation diagram of bedside table double door

				
Eccentric screw A*4	Eccentric bolt B*4	3.5CM self tapping screw C*8	Metal pin D*6	Little nail E*20

Eccentric installation principle



1 Screw the eccentric screw onto the plate

2 Find the corresponding board to insert


3

4 Insert the eccentric bolt into the round hole

5 Rotate 180 degrees clockwise to lock the board

6

Plate part

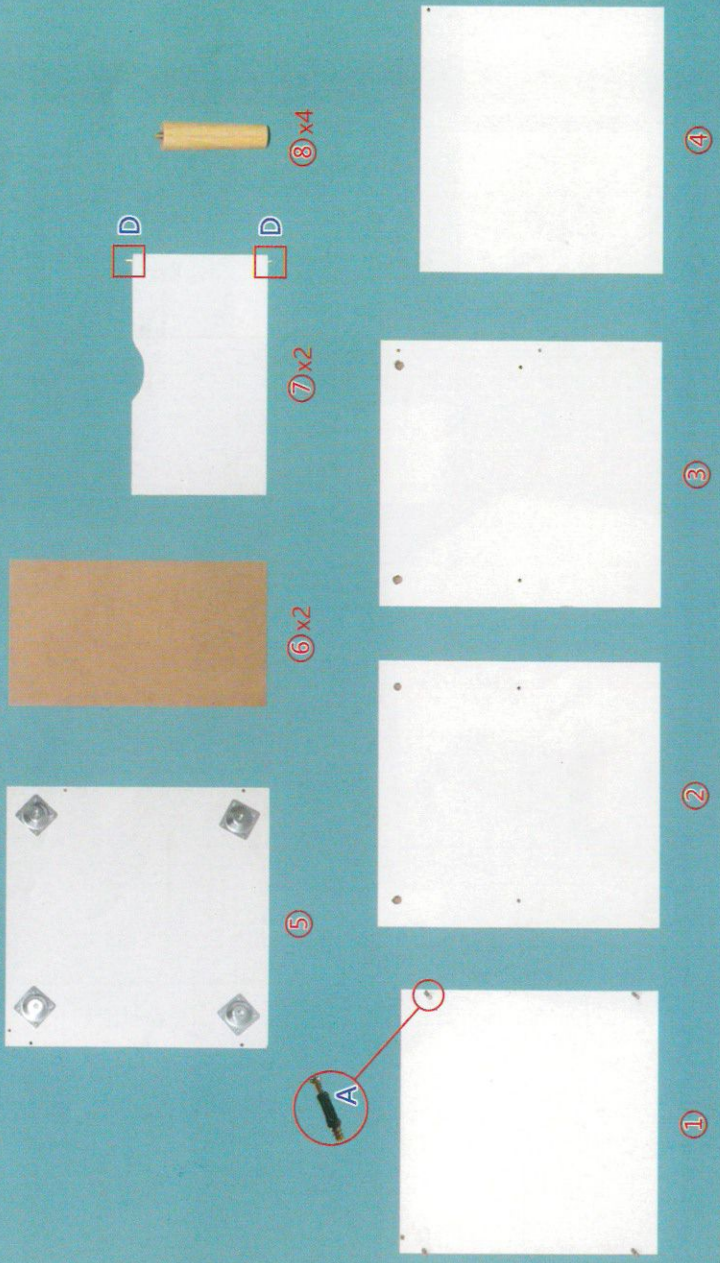

1

2

3

4

5

6

7

8



# Step 1: Installation of overall parts

<1>

Non penetrating small hole facing right and below

Turn the eccentric bolt clockwise to lock the plate

<6>

6x2

<7>

Align the cabinet legs clockwise with the iron sheet and screw them in

8x4

<2>

Align the metal pin on the door panel with the small hole and insert it

7x2

<3>

Align the small hole with the metal pin on the door panel and insert it

<8> Overall alignment

<9>

<4>

Align the metal pin on the door panel with the small hole and insert it

7x2

<5>